

## Instructions on lubricating BC Centerlock Kit for installation :

**STEP.1** Apply an appropriate amount of anti-seize lubricant around each of the PCD holes on the BC Centerlock kit.



**STEP.2** Apply an appropriate amount of anti-seize lubricant around the whole surface area of the BC Centerlock thread.



**STEP.3** Apply an appropriate amount of anti-seize lubricant around the outer edge of the BC Centerlock nut.

